

# Beo4 and BeoRemote One conversion

If you are used to operate your product with Beo4, below conversion helps you find out which button to use on your BeoRemote One when you operate a 'Beo4' product. BeoRemote One buttons are marked with blue. The buttons which have exactly the same function on Beo4 and BeoRemote One are light grey.

**TV:** ... use the **TV** button on BeoRemote One. This also displays a list of TV sources

**V.MEM:** ... Press **TV** to bring up TV sources and find **V.MEM** in the BeoRemote One display

**A.MEM:** Press **MUSIC** to bring up music sources and find **A.MEM** in the BeoRemote One display

**LIST:** ... press **LIST** on BeoRemote One. The **LIST** contains the same functions as Beo4. Note that you cannot select sources via **LIST**, use the **TV** and **MUSIC** buttons instead.

**STOP:** ... press **|| (Pause)** on BeoRemote One.

Note! The **INFO** and **GUIDE** buttons have no function when you operate a 'Beo4' product with BeoRemote One.



**LIGHT:** ... press **LIST** and find **LIGHT** in the BeoRemote One **LIST**.

**RADIO:** ... use the **MUSIC** button on BeoRemote One. This also displays a list of music sources.

**DTV, DVD, and CD:** ... use the **MyButtons**\* on BeoRemote One.

**DTV:** ● ○ ○ ○, **DVD:** ○ ● ○ ○ and **CD:** ○ ○ ● ○


**Navigation button:** ... use the arrow buttons **<**, **>**, **▲** and **▼** on BeoRemote One.

**Search backwards or forwards:** ... use **◀◀** and **▶▶** on BeoRemote One.

**▲ and ▼:** ... use **P + / P -** on BeoRemote One.

**PLAY:** ... use **▶ (Play)** on BeoRemote One.

\*You can change this at any time and dedicate the three **MyButtons** to activate another source directly.

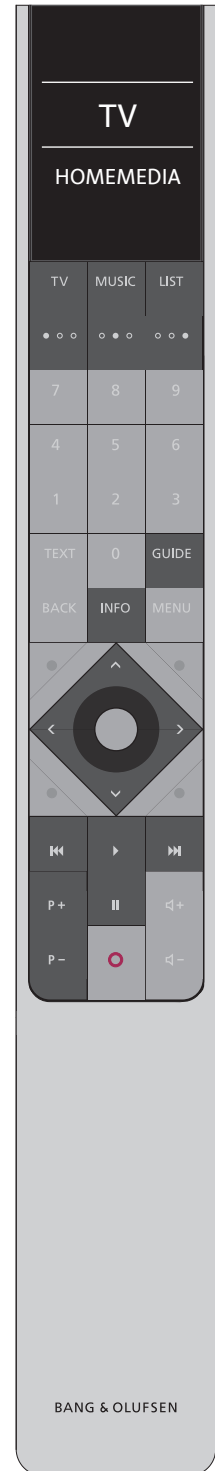

BANG & OLUFSEN