

Guide

To get to know your Bang & Olufsen product, two guides are at your disposal.



The *Guide* provides information on daily use. The *Reference book* gives a thorough overview of all aspects.

To the right, you find the contents of this Guide. The main chapters of the Reference book are listed below:

- Before you start, 6
- How to set up BeoSound 9000, 7
- Connect the cables, 10
- Getting started, 12

- Set the time, 13
- Make BeoSound 9000 start or stop at a specific time, 14

- Playing CDs, 18
- Playing CDs in different ways, 20
- Playing favourite CD tracks, 21
- Name your CDs, 22
- Positioning CDs, 23
- Display CD information, 24

- Playing other sources, 25

- Using the radio, 26
- Optimise radio sound, 27
- Name radio stations, 28
- Play your radio stations, 29

- Adjust and store sound settings, 30

- Using the Beo4 remote control, 31
- Use BeoSound 9000 with a video system, 32

- Looking after BeoSound 9000, 34

- The PIN-code system, 36

Your key to using BeoSound 9000

- 4 Principles of operation
- 5 Buttons on the operation panel

Using the CD player

- 6 Loading CDs
- 7 CD playback
- 7 Playing tracks and CDs in random order
- 8 Choosing discs to include in a sequence

Using the radio

- 9 Switch on the radio

Adjust the volume

- 10 Adjust the sound volume

Your key to using BeoSound 9000


Your BeoSound 9000 is designed for both close-up operation via the BeoSound 9000 operation panel and remote control operation via Beo4.

Whether you place BeoSound 9000 on a table, vertically or horizontally on the wall or on the specially designed BeoSound 9000 stand, you can adjust the position of the operation panel in order to facilitate your operation of the BeoSound 9000.

Compact Disc player

The BeoSound 9000 contains 6 Compact Disc compartments and a carriage moves between compartments enabling CD playback. Move the carriage by pressing the direct CD selection button next to the CD compartment.

When you switch the BeoSound 9000 to stand-by, the carriage will always situate itself next to the operation panel and the CD compartment number 1.

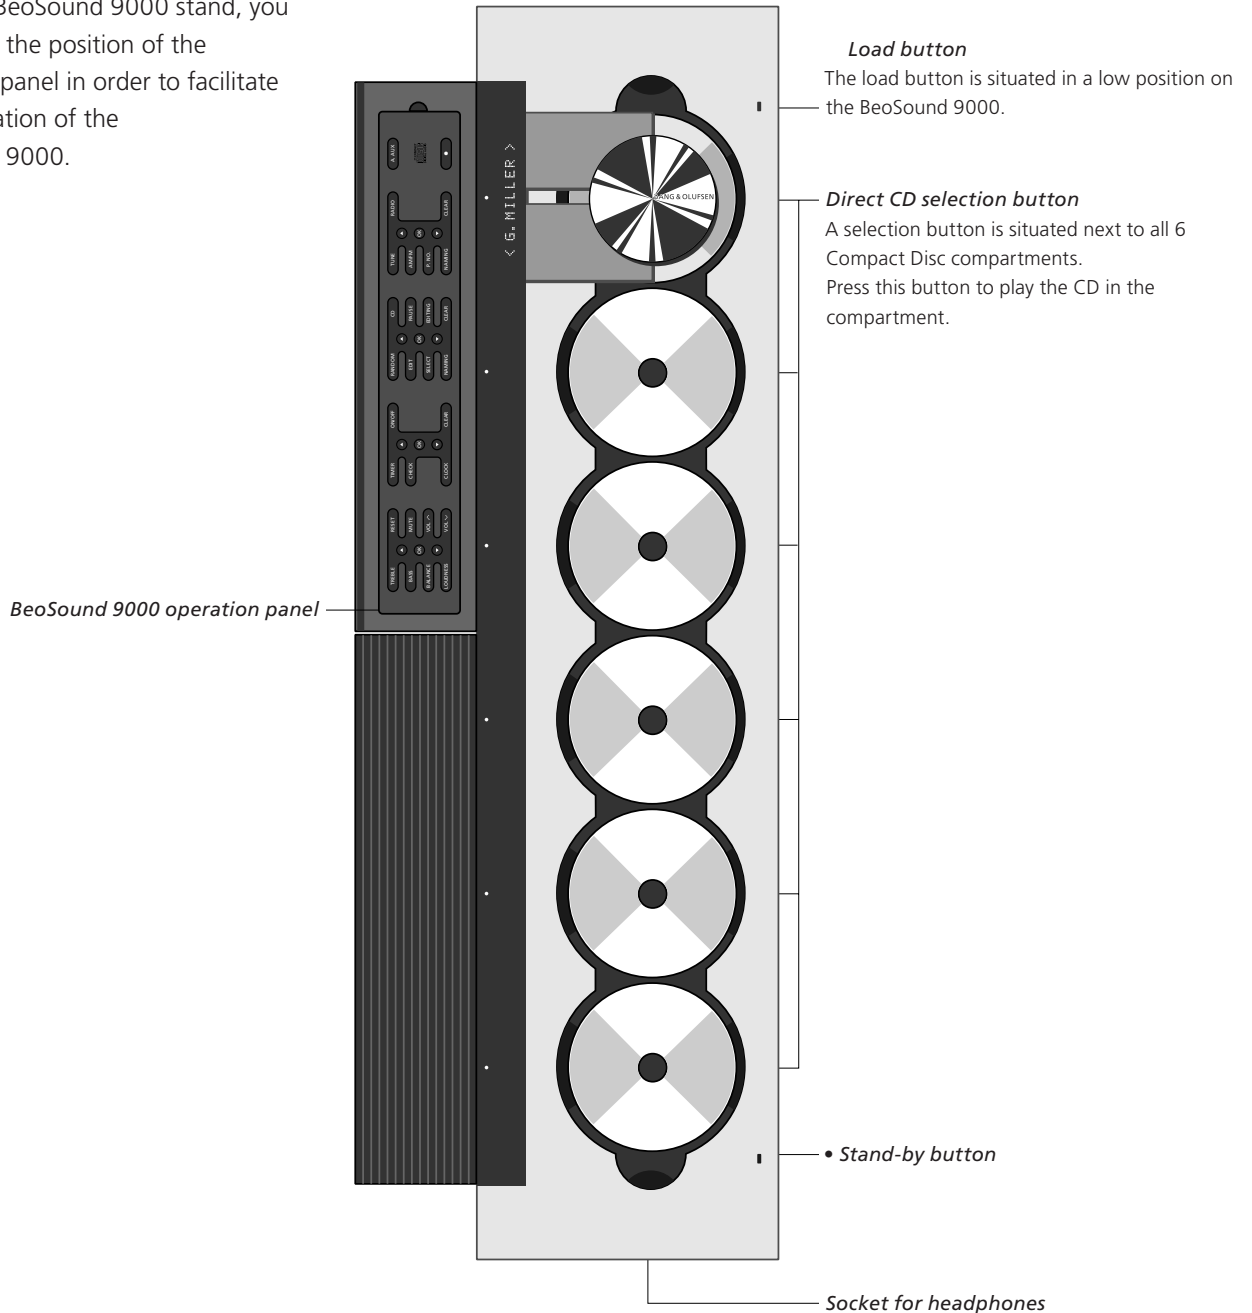

NOTE! Please refer to the Reference Book for instructions of how to remove and replace the operation panel.

Buttons on the operation panel

The buttons on the operation panel are conveniently grouped according to type of function, so you can easily find your way around the panel while operating the system.

A. AUX function. The button enables you to switch on extra audio equipment.

Stand-by function. The button switches BeoSound 9000 to stand by.



Sound adjustments. The buttons give access to sound adjustment functions:
 VOL \wedge and VOL \vee : Raise and lower the volume level.
 MUTE: Mutes or activates the loudspeakers.
 TREBLE, BASS, BALANCE and LOUDNESS: Regulate the sound from the loudspeakers.
 RESET: Resets the settings for sound to their default settings.

Timer functions. The buttons give access to timer functions:
 TIMER: Sets Timers for when the BeoSound 9000 should begin to play or switch off.
 ON/OFF: On or off decides where a timer will be heard or executed.
 CHECK: Checks your Timers.
 CLEAR: Clears your Timers.
 CLOCK: Sets or displays the built-in clock.

CD functions. The buttons give access to the CD functions:
 CD: Plays the CD.
 PAUSE: Pauses playback.
 SELECT and EDITING: Programming sequences of discs and tracks.
 RANDOM and EDIT: Operate special random and edited play functions for the CDs.
 NAMING: Names discs and sequences.
 CLEAR: Clears programmed values.

Radio functions. The buttons give access to the radio functions:
 RADIO: Plays the radio.
 TUNE, AM/FM and P. NO.: Tune in to stations and number them.
 NAMING: Names stations.
 CLEAR: Clears stations.

What's on the display

The display keeps you informed about what the BeoSound 9000 is doing and about ongoing operations, e.g. playing a CD sequence named GLENN MILLER. For details in the operation of the display, see *Switching between displays* in the Reference book.

GLENN MILLER

If PIN appears in the display the first time you activate a function, and you have not received a PIN-code from your Bang & Olufsen retailer, contact your retailer to receive a PIN-code. For further information about the PIN-code function, refer to the chapter *The PIN-code system* on page 36 in the Reference book.

Using the CD player

When you have loaded your BeoSound 9000 with 1–6 CDs, you are ready to start playing your CDs.

When you press the CD button to start playing, all information about the CDs will be registered, e.g. the number of tracks. All loaded CDs are then played.

You can change between the different CDs and the individual tracks, to achieve the sequence of tracks you prefer. You can also play CDs and tracks on individual CDs in a random order, using the random function.

After 12 hours of uninterrupted playing, the BeoSound 9000 stops. If you choose to listen to another source, the CD player switches off automatically.

Loading CDs

Pressing the load button raises the glass door. You can load the CDs you want to play or remove the CDs from their compartments.

- ▲ Press to raise the glass door
- ▲ Press to lower the glass door, or...
- CD ...press to lower the door and start playing

If the carriage is situated over the CD compartment where you want to load a new CD, simply press the direct selection button in front of another CD compartment to make the carriage move.



The CD must be loaded with the text side facing you. Hold the CD by its edges and insert the CD (top section). To unload the CD, hold it by its edges and push the CD slightly forward to release it.

CD playback

Start playback of a CD by pressing the OK button in the CD section of buttons. If you want to play a specific CD, simply press the direct CD selection button* placed next to the CD compartment.

CD	Press to play a CD
▲	Press to play the next track
▼	Press to play the same track again or press twice to play the previous track
PAUSE	Press to pause playback
CD	Press to resume playing
MUTE	Press to silence the speakers. Press again to recall the sound
•	Press to switch to stand-by

*The CD selection buttons can be also be used to step through the tracks of your CDs. Press the button once – and you select the CD, press it continuously – and you step through the tracks of the chosen CD.

Playing tracks in random order

If you select the random play function you will find that the tracks are played in a different order each time the CDs or track series are played.

CD	Press to start playing CD
RANDOM RANDOM ON	Press to display RANDOM ON and cut in the random play function
RANDOM RANDOM OFF	Press twice to display RANDOM OFF and cancel the random play function

If you cancel the random play function while a CD is playing, all the tracks beyond the current track number will be played in chronological order, even if they have already been played while the random play function was cut in.

You can choose to combine the RANDOM function with the EDIT function and play your favourite tracks in a random order. You can also combine these two functions with SELECT and choose to play only your favourite tracks from e.g. two CDs in random order.

NOTE! Please refer to the chapters *Select and store a series of tracks* for one CD and *Enable or disable playback of a track series* in the Reference Book with respect to further details of the EDIT function.

You can make BeoSound 9000 play your favourite CDs in a particular sequence. Every time a CD is included in the sequence, the red indicator next to the CD compartment lights up.

If you want to, you can override the chosen disc sequence and listen to a CD not included in the sequence. Press the direct CD selection button next to the CD you want to hear, and playback will start immediately.

You can also choose to leave out a CD which has already been included in the sequence but only if you are still in the SELECT option*. You press the direct CD selection button again next to a CD you have already included.

Choosing discs to include in a sequence

The CDs you have chosen will start playing in numerical order and continue to play for 12 hours if uninterrupted.

CD	Press to start playback of a CD
SELECT	Press SELECT and SELECT DISC will appear in the display
SELECT DISC	Press the direct CD selection buttons next to the CDs you want to include...
SELECT	Press SELECT to start clearing a sequence and play all six CDs
CLEAR	Press to clear the sequence

*NOTE! The SELECT option lasts for 25 seconds from when you pressed SELECT. If you press a direct selection button after the SELECT option has ended, the disc you chose will start playback immediately and override your sequence. When it has finished playing, BeoSound 9000 will continue playing the sequence you chose before.

To listen to the radio, you must first find and store the frequencies of the radio stations.

You can store up to 60 different radio stations in your BeoSound 9000 (refer to the Reference book for further information).

Switch on the radio

When you switch on the radio, it automatically selects the station which you last listened to, indicating on the display which radio program is playing.

RADIO

Press to turn on the radio



Press to step through your radio programs



Press to switch to stand-by

Adjust the volume

If you store a volume level, BeoSound 9000 will start playing at this level each time you switch it on. Please refer to *Adjust and store sound settings* in the Reference book for further information about adjusting and storing volume levels.

Adjust the sound volume

While you are listening to the radio or CD player, you can of course adjust the sound volume, at any time.

VOL ^	Adjust the volume up or
VOL v	down
MUTE	Silences the speakers immediately. Press again to recall the sound

