BeoPlay V1 – Beo4 and BeoRemote One conversion

Your television software has been updated and your television can now be operated with BeoRemote One. Operation with Beo4 described in the guide can easily be done with the BeoRemote One instead. Below conversion helps you find out which buttons to use. BeoRemote One buttons are marked with blue in the text. The buttons which have exactly the same function on Beo4 and BeoRemote One are light grey.



TV: Use the **TV** button on BeoRemote One. This also displays a list of TV sources.

DTV, DVD and V.MEM: Press **TV** to bring up TV sources and find **DTV, DVD** and **V.MEM** in the BeoRemote One display.

RADIO: Use the **MUSIC** button on BeoRemote One. This also displays a list of music sources.

CD and A.MEM: Press MUSIC to bring up music sources and find CD and A.MEM in the BeoRemote One display.

LIGHT: Press **LIST** and find **LIGHT** in the BeoRemote One LIST.

LIST: Press LIST one BeoRemote One. The LIST contains the same functions as Beo4. Note that you cannot select sources via LIST, use the TV and MUSIC buttons instead.

Navigation button: Use the arrow buttons \langle , \rangle , \wedge and \wedge on BeoRemote One.

Search backwards or forwards: Use \mathbb{H} or \mathbb{H} lon BeoRemote One.

▲ and ▼: Use P + / P - on BeoRemote One.

STOP: Press II (Pause) on BeoRemote One.

PLAY: Use (Play) on BeoRemote One.



BANG & OLUFSEN

Use the INFO and GUIDE buttons on BeoRemote One to bring up programme information and an Electronic Programme Guide respectively.

BeoPlay V1 - New features

Your television software has been updated, and you have now access to more features than described in the guide. New features are described below.

Set up sound mode and speaker group for a specific source ...

When you configure a source, you can set both a sound mode and a speaker group to be selected automatically each time you switch on the source. The settings are made in the ADVANCED SETTINGS menu which is found when you highlight a source and press the red button in the SOURCE LIST menu. If the source is not in the SOURCE LIST, press the green button to find the source first.

Join in on a source from another product ...

You can join in on a source played on another product if you press LIST on BeoRemote One, highlight JOIN and press the centre button repeatedly until you hear the desired source.



Play files via a computer or smart phone ...

To play photos, music or video files via an app on a computer or smart phone, the Digital Media Renderer feature must be enabled. If you do not want your television to be used as a monitor for a computer, smart phone or other device, it is possible to disable the feature. The feature is default enabled.

In the DIGITAL MEDIA RENDERER menu press \langle or \rangle to enable or disable the renderer feature.

If you want your television to be easily recognisable on your computer or smart phone, you can name it via the NETWORK menu by selecting NETWORK INFO then ALIAS or NETWORK SETTINGS, LAN SETTINGS then ALIAS.


Operation of files and on-screen information may differ on a few aspects from otherwise described for HomeMedia, and some apps will not respond to all source control commands.


Activate Deezer, Spotify or YouTube ...

If you have a subscription for Deezer or Spotify, you can bring up and activate the respective apps via the MUSIC button on BeoRemote One or via the SOURCE LIST to find and listen to music of your choice. You can also access YouTube via the TV button on BeoRemote One or the SOURCE LIST to watch a variety of different video content. To use Spotify, Deezer and YouTube, your television must be connected to the Internet.

Deezer, Spotify and YouTube may not be available on all markets.

BeoRemote One

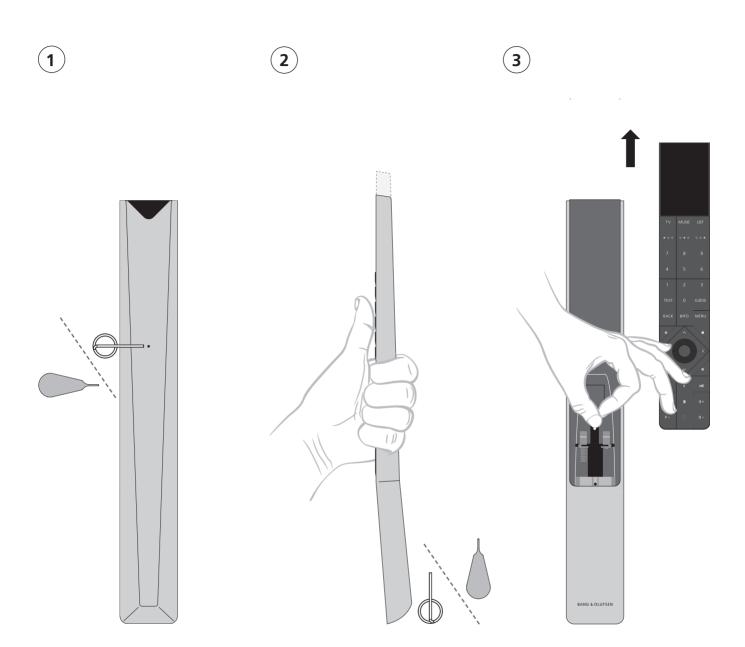

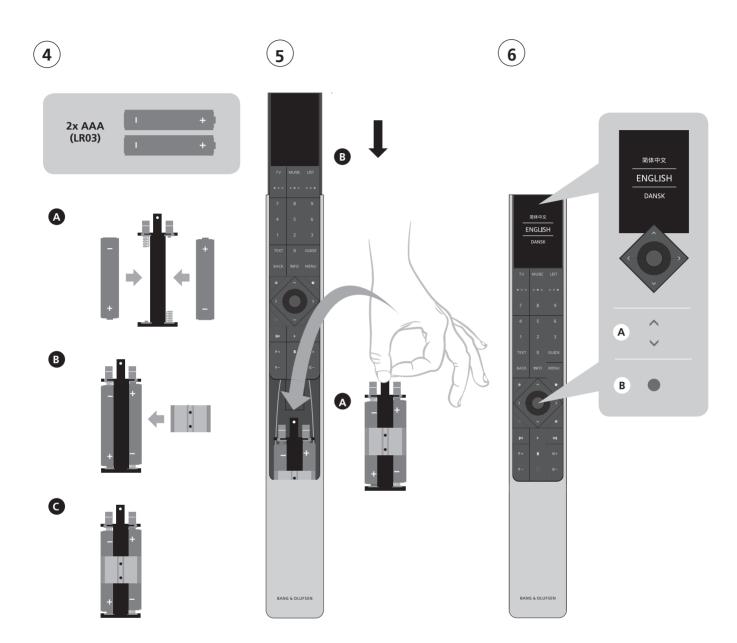



Do not expose batteries or battery packs to excessive heat such as sunshine, fire or the like.