

The Guide and the Reference book

This Guide contains information about the daily use of your Bang & Olufsen product. The Reference book contains information about more advanced operation as well as connecting and operating external equipment, it also provides you with an overview of on-screen menus.

We expect your Bang & Olufsen retailer to deliver, install and set up your products. However, the information required to install and set them up is included in the Reference book. This is useful if you move your products or expand your system at a later date.

Index...

The Reference book also contains an index which refers to this Guide and the Reference book. It can help you find the specific subject you want to know more about.

An explanation of symbols in the Guide and Reference book

Buttons on the Beo4 remote control

TV, LIST
◀ ▶
▲ ▼

Display on the Beo4 remote control

FORMAT

Display on the television

VOL 26

Introducing your Bang & Olufsen television and Beo4, 4

Find out how to use the Beo4 remote control and bring up the menus on the screen.

Watch TV, 6

Find out how to operate the daily functions of your television.

Adjust sound and picture format, 8

How to adjust volume and change sound mode. How to change picture format.

Teletext, 10

How to use the teletext functions of your television, for example MEMO pages.

Maintenance, 12

How to clean your television and change batteries in the Beo4 remote control.

Introducing your television and Beo4

The Beo4 remote control gives you access to all functions. When a function is in use, you are informed via displays on Beo4 or on the television.

- Switch on the television **TV**
- Switch on a connected set-top box **DTV**
- Select channels or teletext pages. Enter data in on-screen menus **0 – 9**
- Enter information in on-screen menus. **◀ ▶**
- Accept and store instructions or settings. Press and hold to call up a channel list **GO**
- Step up or down through channels or menu items **▲ ▼**
- Reveal additional functions in the Beo4 display, such as FORMAT **LIST**



For information about how to operate connected equipment, refer to the Guide enclosed with it. For information on how to add extra functions to those shown in the Beo4 display, refer to the chapter 'Customise Beo4' in the Reference book.

- TV** The Beo4 display shows the source you have selected, or extra functions available when you press the LIST button
- FORMAT**
- MENU** Bring up the main menu
- TEXT** Switch on teletext
- ^ Adjust sound volume: press in the middle to mute the sound
- v
- STOP** Step back through previous menus
- EXIT** Exit all on-screen menus
- Switch the television to standby

Displayed information and menus

Information about the selected source is shown in the display. On-screen menus allow you to adjust settings.

How to use on-screen menus ...

Press to switch on the television **TV**

Press to bring up the TV SETUP menu **MENU**


Press to move between the different menu options **▲**
▼

Press to reveal different settings **◀▶**

Press to bring up a menu or store a setting you have made **GO**

Press to step back through previous menus **STOP**

Press to exit all menus **EXIT**

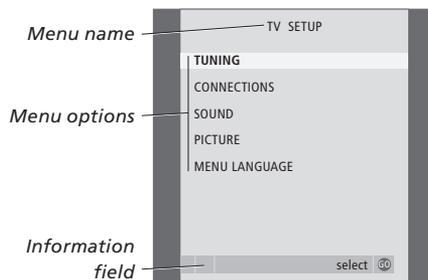

Example of on-screen menu.



Watch TV

This chapter describes daily use of your television: how to switch the television on, choose a channel and switch the television off.

The TV list gives you an overview of all your channels.

Select a TV channel

When you switch the television on, the last channel viewed appears on the screen.

Press to switch on the television **TV**

Press a channel number to go directly to that channel **0 – 9**

Press to change channels one by one **▲**
▼

Press to switch the television to standby **•**

Pressing 0 swaps between the current TV channel and previous TV channel.

Bring up a TV list

All your TV channels appear on a list, which you can bring up on the screen. The list contains channel numbers and names, and can contain up to 99 TV channels.

Press to switch on the television **TV**

Press and hold to bring up a TV list on the screen **GO**

Press **◀◀** or **▶▶** to step between 'pages' in the channel list **◀◀ ▶▶**

To select a channel, enter the channel number, or ... **0 – 9**

... press until the desired channel is highlighted **▲**
▼

Press to switch on the chosen channel, or ... **GO**

... press to leave the menu **EXIT**

NOTE! If the screen is overheated, black spots may appear in the picture. These spots disappear again, once the television cools down to normal temperature.

CHANNEL LIST	
1	SAT 1
2	INFOKANAL
3	RTL
4	MTV
5	DISCOVERY
6	EUROSPORT
7	ARD
8	TV4
9	DR1
10
11	ZDF
12	SVT 1
13
14	TV3
15	TVDK1
16	TVDK2
17	CNN
18	BBCWORLD
▼ more select 	

The channel list provides you with an overview of all your available TV channels.

Adjust sound and picture format

Several sound adjustment possibilities are available in your television.

You can adjust the volume or mute the sound completely at any time.

If channels are broadcasted with different sound types or languages, you can choose between the sound types or languages.

If speakers are connected to your television, you can adjust the speaker balance and select a speaker combination.

While watching TV, you can adjust the picture format.

Adjust volume or mute the sound

You can adjust volume or mute the sound at any time.

Press either end of the button to adjust the volume up or down

Press in the middle of the button to mute the sound

Press either end of the button to bring the sound back

Prolonged listening at high volume levels can cause hearing damage!

Sound type or language

While you are watching TV, you can switch between the types of sound that are available.

Press repeatedly to display SOUND* on Beo4

LIST

SOUND

Press to bring up the current sound type in the display

GO

Press GO repeatedly to switch to another sound type or language in a multi-language programme

GO

Press to leave the SOUND function

EXIT

You can store your favourite sound type when tuning in your TV channels. For further information, refer to the chapter 'Edit tuned channels' on page 12 in the Reference book.

*NOTE! In order to display SOUND on Beo4, you must first add it to the Beo4 list of functions. Refer to the chapter 'Customise Beo4' on page 34 in the Reference book.

Speaker balance or combination

If you connect loudspeakers to your television, you can change the speaker combination at any time.

Press repeatedly to display SPEAKER on Beo4

LIST

SPEAKER

Press to select a speaker combination

1 – 3

Press to remove SPEAKER from the Beo4 display and return to the source you were using

EXIT

Speaker combinations

SPEAKER 1 ... Sound in the television speakers only.

SPEAKER 2 ... Stereo sound in the two front speakers.

SPEAKER 3... The television speakers and the front speakers are active.

Picture format

Select a picture format to optimise the picture.

Press repeatedly to display FORMAT on Beo4

LIST

FORMAT

Press if you want to optimise the picture, or ...

GO

... press the number of the desired picture format

1 – 3

If you have chosen Format 1 ...

Press ◀◀ or ▶▶ to select variations of this format

◀◀ ▶▶

If you have chosen Format 1 or Format 2 ...*

Press ▲ or ▼ to move the picture up and down

▲
▼

Press to leave the FORMAT function

EXIT

**Pictures in 4:3 format cannot be moved up and down.*

Picture formats to choose from ...

FORMAT 1 ... For standard TV pictures. Three variations are available: 4:3, 15:9 and Panoramic view (for the largest picture).

FORMAT 2 ... For letter-box pictures. If necessary move the picture up or down to ensure that channel names or subtitles – if these appear in the broadcasted picture – can be seen. In some cases FORMAT 2 is selected automatically.

FORMAT 3 ... For genuine 16:9 wide-screen pictures. FORMAT 3 is usually selected automatically. If this is not the case, you can select it yourself.

To temporarily remove the picture from the screen, press LIST repeatedly to display P.MUTE on Beo4, then press GO. To restore the picture again, press any source button, such as TV.

Teletext

If you select a channel and the broadcaster offers a teletext service, the television gives you access to teletext pages and any subpages linked to the pages.

The arrow buttons on Beo4 and the menu bar at the top of the screen, help you move to the page you want. When you get there, you can pause the turning of subpages to read them at your own pace.

The television can remember your favourite pages or reveal hidden messages. To make your favourite teletext pages appear first when you bring up teletext, store them as MEMO pages.

Basic teletext functions


Navigate through teletext pages by using the menu bar at the top of the teletext page.

- > Press **TEXT** to gain access to teletext and **EXIT** to leave teletext.
- > If you press **EXIT** and leave teletext before the page you want is found, the display **TEXT** advises you when the page is found.
- > Press **GO** to see the page.

If you change to another program or leave teletext by selecting a new source, you are not advised when the page is found.

To move to a new page ...

- > Enter the number of the page you wish to see, or ...
- > ... press **◀** to move the highlighted cursor to **PAGE**.
- > Press **▲** or **▼** to step between pages.
- > Pressing **GO** steps to index pages (100, 200, 300 ...).

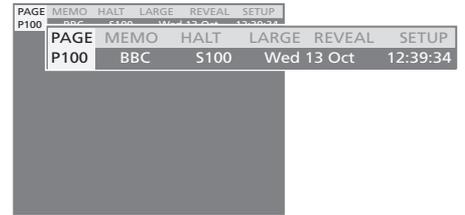

To stop subpages from turning ...

- > Press **STOP** to stop subpages from turning, or ...
- > ... move the cursor to **HALT** and press **GO**. **HALT** is replaced by a set of four digits.
- > Use **▼** and **▲** to step to the subpage you wish to see, or ...
- > ... enter its number using the number buttons on Beo4.
- > Press **GO** to restart page turning.

To enlarge the teletext page ...

- > Press **▶** to move the highlighted cursor to **LARGE**.
- > Press **GO** to show the upper half of the page in double height. Press **GO** again to see the lower half of the page.
- > Press **GO** to return the teletext page to normal size.

To reveal hidden messages and the like ...

- > Press **▶** to move the highlighted cursor to **REVEAL**.
- > Press **GO** to reveal hidden text on the current page.

Store favourite teletext pages

Nine MEMO pages are available for each television channel's teletext service.

To create a MEMO page ...

- > Bring up a page you view often.
- > Press ◀ or ▶ to move the cursor along the menu bar to SETUP and press GO. The 9 available MEMO slots are shown by number.
- > Press ◀ or ▶ to move the cursor to another MEMO page.
- > Press GO to store the current page. The cursor moves to the next available MEMO slot.
- > Use the number buttons on Beo4 to select the next teletext page you wish to store.
- > Repeat the procedure for each page you wish to store.
- > To leave the MEMO setup, press ◀ or ▶ to move the cursor to BACK and press GO.
- > Press EXIT to leave teletext.

Day-to-day use of MEMO pages

You may wish to refer to your teletext MEMO pages quickly, for example, if you are leaving for work and wish to check traffic information on a teletext service.

To view MEMO pages ...


- > Press TEXT to bring up teletext.
- > Press ▲ or ▼ to move between MEMO pages.
- > Press EXIT to leave teletext.

To delete a MEMO page ...

- > Press ◀ or ▶ to move the cursor to SETUP and press GO.
- > Move the cursor to the MEMO page you wish to delete and press the yellow button.
- > Press the yellow button again to confirm.

To see teletext subtitles ...

If you would like available teletext subtitles to appear automatically for a particular channel, store the teletext subtitles page as MEMO page 9.

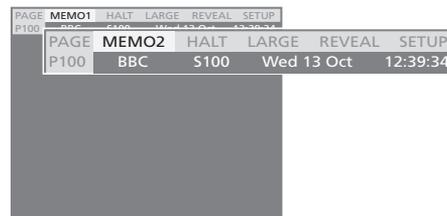

Maintenance

Regular maintenance, such as cleaning the television, is the responsibility of the user. To achieve the best result, follow the instructions to the right. Contact your Bang & Olufsen retailer to determine recommendations for regular maintenance.

Cleaning

Never use alcohol or other solvents to clean any part of the television, stand or wall bracket!

Cabinet surfaces

Wipe dust off the surfaces using a dry, soft cloth. Remove grease stains or persistent dirt with a soft, lint-free, firmly wrung cloth, dipped in a solution of water containing only a few drops of mild detergent, such as washing-up liquid.

The speaker cover may also be cleaned with a soft brush mounted on a vacuum cleaner, set to the lowest level.

Picture screen

To clean the picture screen, use a mild window cleaning fluid (not containing alcohol). To retain the optimum performance of the screen, make sure that no streaks or traces of the cleaning fluid are left on the screen.

Beo4

Wipe the Beo4 remote control with a soft, lint-free, firmly wrung cloth.


Changing the Beo4 batteries

When BATTERY appears in the Beo4 display, it is time to change the batteries in the remote control.

The Beo4 requires three batteries. We recommend that you use Alkaline batteries only (1.5 V – size AAA). Replace the batteries as shown on this page. Keep a finger on top of the batteries until the lid is replaced

When you have replaced the batteries, wait about 10 seconds until TV appears in the display. The Beo4 remote control is then ready for use.

Do not expose batteries to excessive heat such as sunshine, fire or the like!

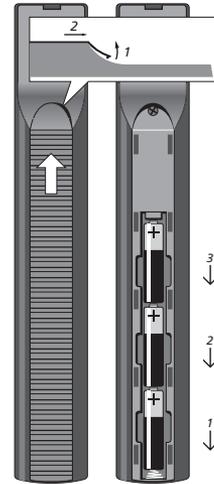

For your information ...

Your needs as a user are given careful consideration during the design and development process of a Bang & Olufsen product and we strive to make our products easy and comfortable to operate.

Therefore, we hope that you will take the time to tell us about your experiences with your Bang & Olufsen product. Anything which you consider important – positive or negative – may help us in our efforts to refine our products.

Thank you!

Write to: Bang & Olufsen a/s
BeoCare
Peter Bangs Vej 15
DK-7600 Struer

or call/fax: Bang & Olufsen
Customer Service
+45 96 84 45 25 (phone)
+45 97 85 39 11 (fax)

or email via: www.bang-olufsen.com

Technical specifications, features and the use thereof are subject to change without notice.

