

BeoVision

New software – Supplement

On-screen menus

Your television has been equipped with new software and possibly hardware. This results in new functions and features which are described in this supplement. The supplement only describes major differences compared to the Guide you originally received with your television.

The main changes in your television are in the on-screen menus and menu layout. However, new functions have also been added.

CHANNEL SETUP <ul style="list-style-type: none">EDIT CHANNELSFINE TUNING	PICTURE <ul style="list-style-type: none">BRIGHTNESSCONTRASTCOLOURTINT
PLAY TIMER <ul style="list-style-type: none">TIMER ON/OFFPLAY TIMER INDEXPLAY TIMER PROGRAMMINGWAKE-UP TIMER	CLOSED CAPTIONING
OPTIONS <ul style="list-style-type: none">CONNECTIONS<ul style="list-style-type: none">AV1–AV6DISPLAY 1DISPLAY 2HDMI EXPANDERLINK<ul style="list-style-type: none">CHANNELMODULATORSOURCE*	PARENTAL CONTROL <ul style="list-style-type: none">TV PARENTAL GUIDELINESMPAA RATINGACCESS CODE
TUNER SETUP <ul style="list-style-type: none">TV TUNERATSC	CLOCK <ul style="list-style-type: none">TIMEDATEMONTHYEAR
SOUND <ul style="list-style-type: none">ADJUSTMENTSPEAKER TYPESSPEAKER ROLESSPEAKER DISTANCESPEAKER LEVELSOUND SYSTEM	STAND POSITIONS <ul style="list-style-type: none">VIDEOAUDIOSTANDBYSTAND ADJUSTMENT


The extended on-screen menu system for the television. The greyed menu items indicate optional extras which may or may not be present in your system.

**SOURCE ... If you have disabled the TV tuner, select an available source to scan in a new link channel.*

Your television has been updated and new features are available.

For general information about remote control operation, refer to the Guide enclosed with your remote control.

Black menus

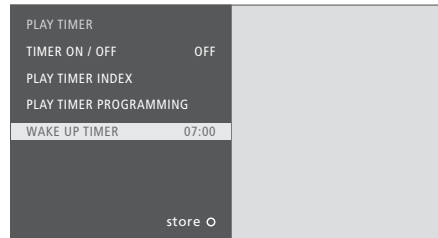

The menus in your television have changed colour and position. The menu background colour is black and the menus have moved from the centre to the left side of the screen.

Instead of black bars on each side of the menu, the television picture is shown to the right.

Standby options

Your standby options have changed compared to those mentioned in your Reference Book.

When you register a set-top box in the CONNECTIONS menu, you can select 'STANDBY OPTIONS' for your set-top box. This means that you can select if the connected set-top box should switch to standby automatically.

The options are:

OFF AT SOURCE CHANGE ... The set-top box is switched on when selected, and off when another source is selected.

OFF AT TV STANDBY ... The set-top box is switched on when selected, and off when the television is switched off.


ALWAYS ON ... The set-top box is always on and never switched off.

MANUAL CONTROL ... The set-top box is not switched on and off automatically. You switch it on manually by means of the remote control.

HDMI Expander

With the new software update, you have the possibility of adding additional HDMI sources. You can at any time enable or disable an HDMI Expander connected to the HDMI C socket.

If you set the HDMI EXPANDER in the CONNECTIONS menu to YES, the HDMI-C option in the AV menus is replaced with HDMI-C1, HDMI-C2, HDMI-C3, and HDMI-C4.

CONNECTIONS	
AV1	V.MEM
AV2	NONE
AV3	NONE
AV4	NONE
AV5	DTV2
AV6	CAMERA
DISPLAY 1	LCD
HDMI EXPANDER	YES
LINK	
store 	

TIMER RECORDER is part of the AV menus. You can activate the Timer recording option for a connected recorder. Only available in the AV1 and AV2 menus, and can only be activated in one of these menus at any time.

Tuner setup

You may choose to disable either the TV tuner, the ATSC tuner, or both. If you disable the TV tuner, you can activate a connected peripheral unit with the TV button. If you disable the ATSC tuner, you can activate a connected peripheral unit with the DTV button.

To disable the internal tuner ...

- > Press TV to switch on the television.
- > Press **MENU** to bring up the TV SETUP menu and press **▼** to highlight OPTIONS.
- > Press **GO** to bring up the OPTIONS menu, and press **▼** to highlight TUNER SETUP.
- > Press **GO** to bring up the TUNER SETUP menu, TV TUNER is already highlighted.
- > Press **◀** or **▶** to switch between the setting OFF, ANTENNA, CABLE, or CABLE BOX.*
- > Press **▼** to highlight ATSC.
- > Press **◀** or **▶** to switch between the setting ON or OFF.
- > Press **GO** to store or press **EXIT** to leave the menu without storing.*